

PREFACE

This SERVICE MANUAL has been prepared as a "SERVICE GUIDE" for the mechanic responsible for the upkeep of the HONDA OUTBOARD MOTOR B75.

It is compiled into nine sections and summarizes the procedures for disassembling, inspecting and reassembling the components of the machine.

Careful attention to the instructions given herein will result in better, safer service work.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATEVER.

NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION.

HONDA MOTOR CO., LTD.
Service Publications Office

CONTENTS

① THE 9 RULES FOR EFFECTIVE SERVICE WORK	58
② POWER HEAD AND LOWER UNIT REMOVAL AND INSTALLATION	2
1. Lower Unit	2
2. Power Head	3
③ POWER HEAD	5
1. Recoil Starter	5
2. Carburetor and Intake Manifold	8
3. Cooling System.....	12
4. Cylinder Head and Camshaft	13
5. Cylinder Block, Pistons and Crankshaft	18
6. Electrical System	23
7. Oil Pump and Fuel Pump	25
④ LOWER UNIT	29
1. Propeller.....	29
2. Water Pump and Water Tubes	30
3. Gear Case and Shift Mechanism	33
⑤ SWIVEL UNIT	36
1. Steering Handle	36
2. Swivel Case, Mount Frame and Stern Brackets	37
3. Oil Case	40
4. Tilt and Reverse Lock Mechanisms ..	42
5. Shift Shaft	44
⑥ POST-SERVICE TESTS	45
⑦ FUEL TANKS	49
⑧ SERVICE DATA	50
1. Special Tools.....	50
2. Maintenance Schedule	52
3. Lubrication Chart.....	53
4. Torque Specification	54
5. Service Data	54
6. Trouble Shooting	56
7. Specifications.....	57
⑨ REMOTE CONTROL (Optional)	59
⑩ B75 K3 Service Information	65

2. POWER HEAD

1. Remove the fuel pump cover and disconnect the fuel tubes from the pump.

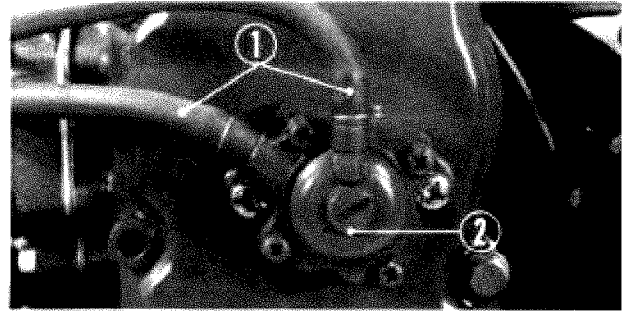


Fig. 2-5 ① Fuel tubes ② Fuel pump

2. Disconnect the choke rod and fuel stop rod.

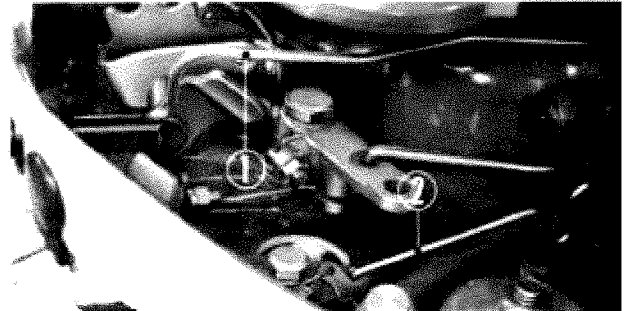


Fig. 2-6 ① Choke rod ② Fuel stop rod

3. Remove the 6 mm bolts and the linkage rods should remain attached to the carburetor.

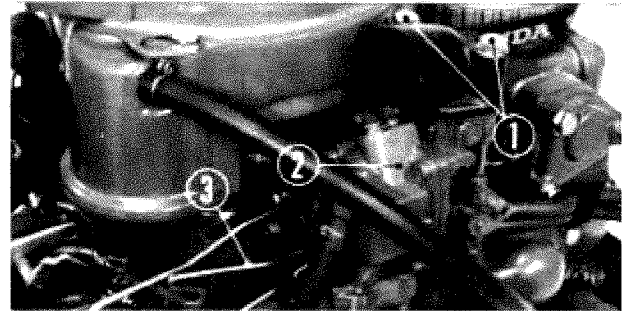


Fig. 2-7 ① 6 mm bolts ③ Throttle rod
② Carburetor

4. Disconnect the primary wire from the engine switch.

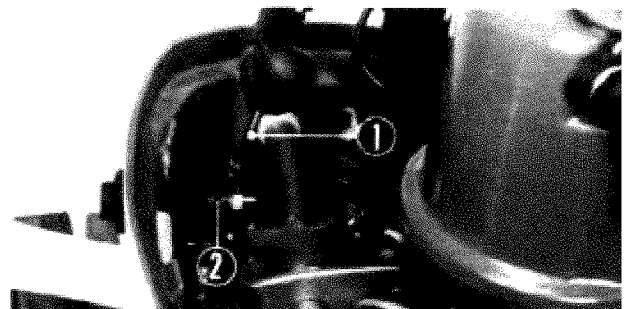


Fig. 2-8 ① Ground cable ② Engine switch

5. Disconnect the breather tube, overflow pipe and cooling water pipe.

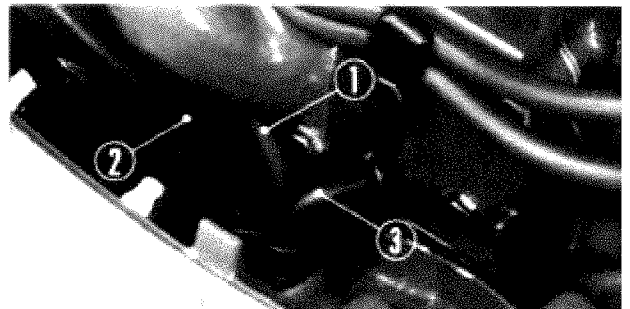


Fig. 2-9 ① Overflow pipe ③ Cooling water pipe
② Breather tube

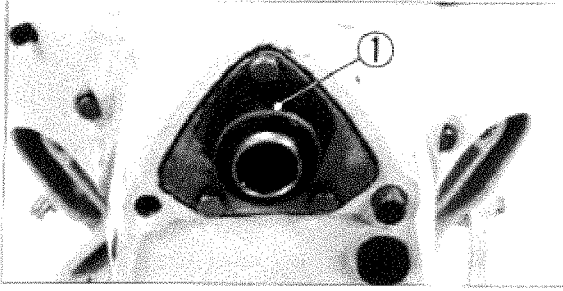


Fig. 2-10 ① Exhaust plate

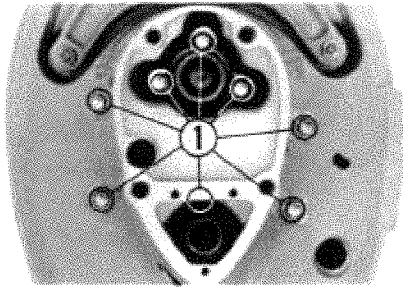


Fig. 2-11 ① 6 mm bolts

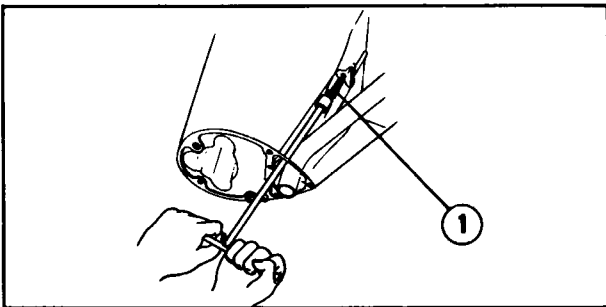


Fig. 2-12 ① 6 mm bolt

6. Remove the exhaust plate.

7. Remove the eight 6 mm bolts.

Note :

Remove one 6 mm bolt, working through it with a socket. (Special tool)