


1970

Johnson

OUTBOARD MOTOR

SERVICE MANUAL

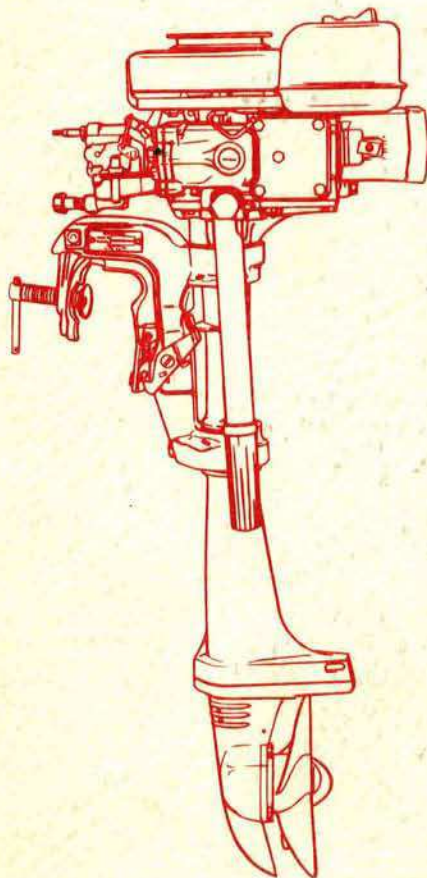

MODEL

1R70

INTRODUCTION	1
GENERAL SERVICE INFORMATION	2
FUEL SYSTEM	3
IGNITION SYSTEM	4
POWER HEAD	5
LOWER UNIT	6

1-1/2 HP



JOHNSON MOTORS, Waukegan, Illinois, U.S.A.

JOHNSON OUTBOARD OIL

We recommend using JOHNSON OUTBOARD OIL.

JOHNSON OUTBOARD OIL is designed specifically for Johnson outboard motor use at a 50 to 1 gasoline to oil ratio for engine break in and after break in, new and older models. This improved lubrication is formulated to provide additional benefits such as: exceptional lubrication, less varnish and combustion chamber deposits, better spark plug life, good mixability with gasoline even in cold weather, and reduction of pre-ignition.

CAUTION

If Johnson Outboard Motor Oil should not be available, see oil specifications Section 2.

USE ONLY THE RECOMMENDED OIL TO GASOLINE MIXTURE, REGARDLESS OF THE CLAIMS MADE FOR SOME LUBRICANTS.



SPURIOUS PARTS

It is recommended that only genuine factory approved replacement parts be used. Replacement parts not manufactured nor approved by Johnson Motors, should not be used.

Failure resulting from use of parts inferior to those manufactured or approved by Johnson Motors, will not be covered under warranty.

TABLE OF CONTENTS

	PAGE
SECTION 1 INTRODUCTION	1-1
Arrangement of Manual	1-2
Parts Catalog	1-2
Service Policy	1-2
Special Service Tools	1-2
Outboard Motor Nomenclature	1-3
SECTION 2 GENERAL SERVICE INFORMATION	2-1
Specifications	2-2
Clearance Chart	2-3
Torque Chart	2-3
Lubrication Chart	2-4
Tune-up Procedure	2-6
Trouble Check Chart	2-7
Submerged Motors	2-8
SECTION 3 FUEL SYSTEM	3-1
Description	3-2
Theory of Operation	3-2
Removal of Fuel Tank	3-3
Removal of Carburetor and Intake Manifold	3-3
Carburetor Disassembly	3-3
Cleaning, Inspection and Repair	3-4
Carburetor Reassembly	3-6
Reassembly of Carburetor and Leaf Valves to Motor	3-7
Carburetor Adjustments	3-7
SECTION 4 IGNITION SYSTEM	4-1
Description	4-2
Theory of Operation	4-2
Removal of Magneto from Power Head	4-3
Magneto Disassembly	4-3
Cleaning, Inspection, and Repair	4-4
Testing Coil, Condenser and Breaker Points	4-5
Magneto Reassembly	4-6
Reassembly of Magneto to Motor	4-6
Breaker Point Adjustment	4-7
SECTION 5 POWER HEAD	5-1
Description	5-2
Theory of Operation	5-2
Checking Motor Temperature	5-3
Removal of Power Head	5-3
Disassembly of Power Head	5-3
Cleaning, Inspection, and Repair	5-4
Reassembly of Power Head	5-6
Reassembly of Power Head to Exhaust Housing	5-8
Break-In	5-8