


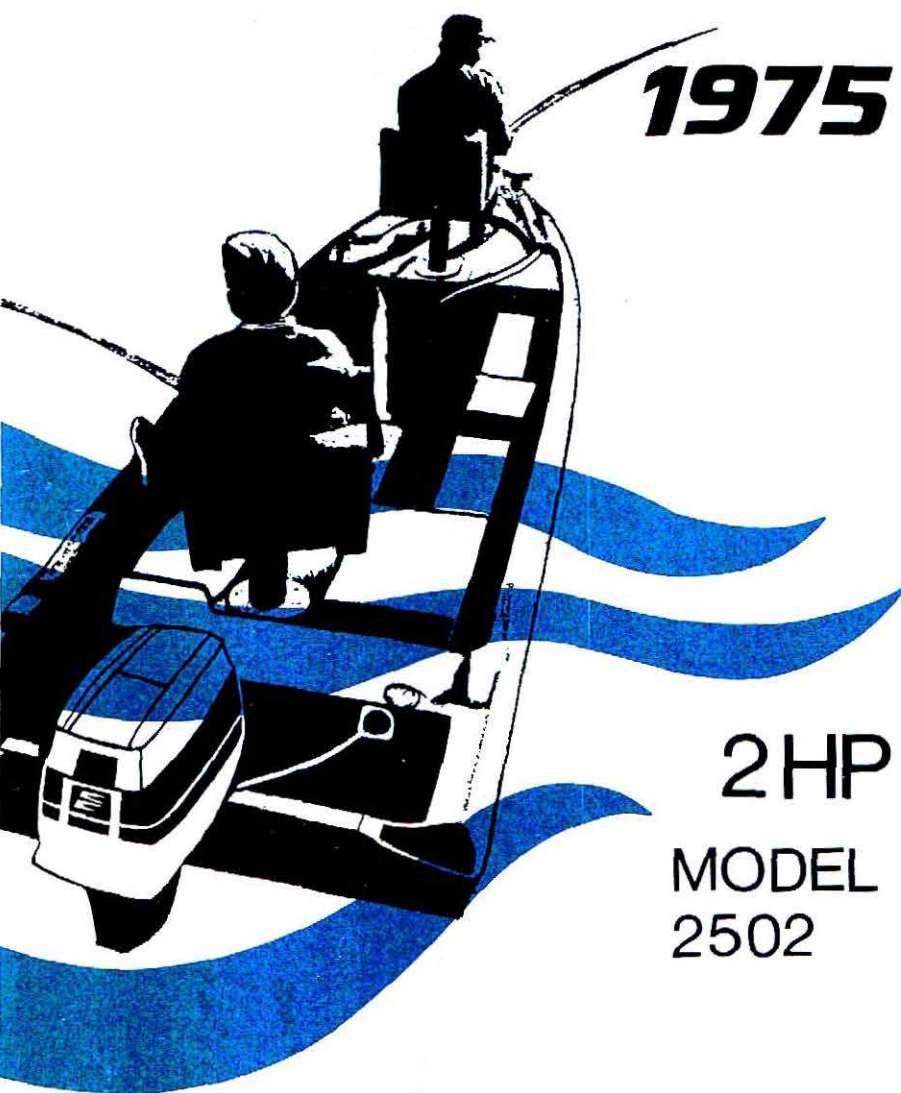

EVINRUDE

SERVICE

MANUAL



INTRODUCTION

1

GENERAL
SERVICE
INFORMATION

2

FUEL
SYSTEM

3

IGNITION
SYSTEM

4

POWER
HEAD

5

LOWER
UNIT

6

MANUAL
STARTER

7

TABLE OF CONTENTS

	PAGE
SECTION 1 INTRODUCTION	1-1
Arrangement of Manual	1-2
Parts Catalog	1-2
Service Policy	1-2
Replacement Parts	1-2
Special Service Tools	1-3
Outboard Motor Nomenclature	1-3
SECTION 2 GENERAL SERVICE INFORMATION	2-1
Specifications	2-2
Coil Test Specifications	2-2
Clearance Chart	2-3
Torque Chart	2-3
Lubrication Chart	2-4
Gearcase	2-4
Lubrication Points	2-5
Engine Fuel and Lubricant	2-6
Break-In	2-7
Tune-Up Procedure	2-8
Trouble Check Chart	2-9
Submerged Motors	2-10
SECTION 3 FUEL SYSTEM	3-1
Description	3-2
Theory of Operation	3-2
Removal of Fuel Tank, Carburetor and Intake Manifold	3-3
Carburetor Disassembly	3-3
Cleaning, Inspection and Repair	3-4
Carburetor Reassembly	3-6
Reassembly of Leaf Valves, Intake Manifold, and Carburetor to Motor	3-7
Carburetor Adjustments	3-7
SECTION 4 IGNITION SYSTEM	4-1
Description	4-2
Theory of Operation	4-2
Removal of Magneto from Power Head	4-3
Magneto Disassembly	4-3
Cleaning, Inspection, and Repair	4-4
Testing Coil, Condenser and Breaker Points	4-5
Magneto Reassembly	4-6
Reassembly of Magneto to Motor	4-6
Breaker Point Adjustment	4-7
SECTION 5 POWER HEAD	5-1
Description	5-2
Theory of Operation	5-2
Checking Motor Temperature	5-3
Removal of Power Head	5-3
Disassembly of Power Head	5-3
Cleaning, Inspection, and Repair	5-4
Reassembly of Power Head	5-6
Reassembly of Power Head to Exhaust Housing	5-8
Break-In	5-8

TABLE OF CONTENTS (CONT)

	PAGE
SECTION 6 LOWER UNIT	6-1
Description	6-2
Removal of Gearcase	6-2
Removal of Exhaust Housing	6-2
Disassembly of Gearcase	6-2
Cleaning, Inspection, and Repair	6-3
Reassembly of Gearcase	6-4
Reassembly and Installation of Exhaust Housing	6-5
Installation of Gearcase	6-5
Lower Unit Adjustments	6-5
SECTION 7 MANUAL STARTER	7-1
Description	7-2
Removal of Starter	7-2
Disassembly of Starter	7-2
Cleaning, Inspection, and Repair	7-3
Reassembly of Starter	7-3
Installing Starter	7-4